


Update the SMSL DAC MCU firmware

Brief:


Use Windows OS to do this!

Steps:


1) Open the APP “**ispV2.4.exe**”

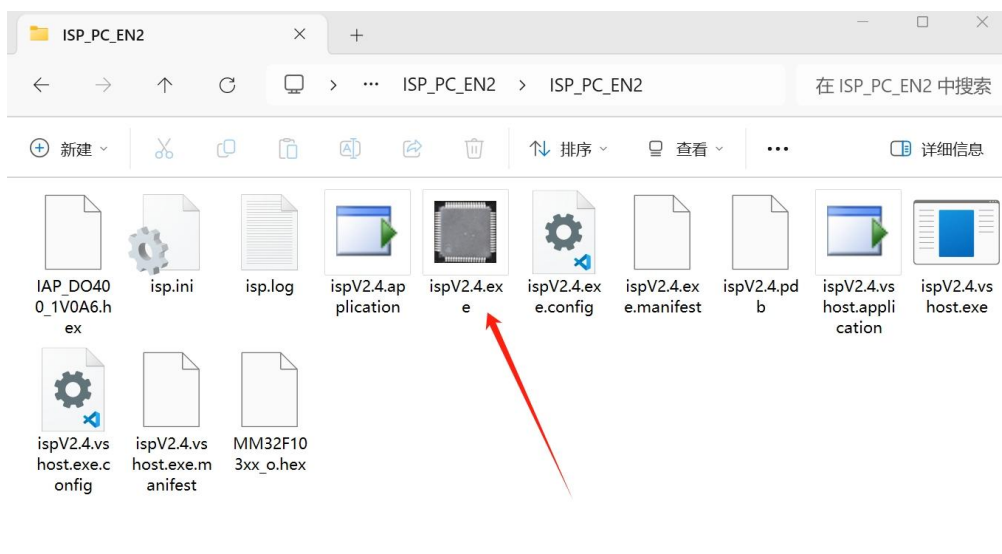


2) Load File “**IAP_xxxxx.hex**”

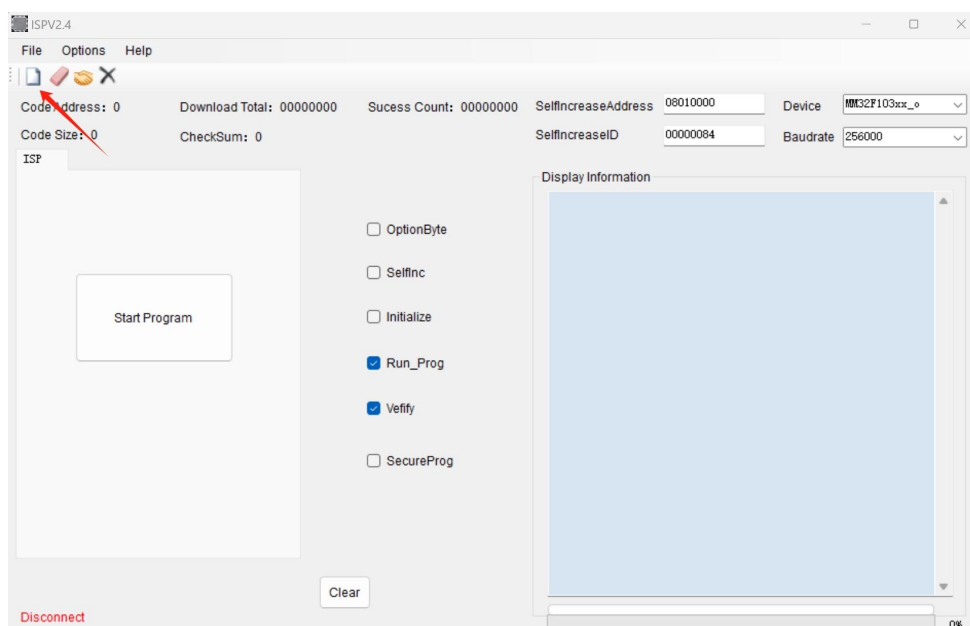

3) Connect , Hold the **KEY** and connect the **power cable**!

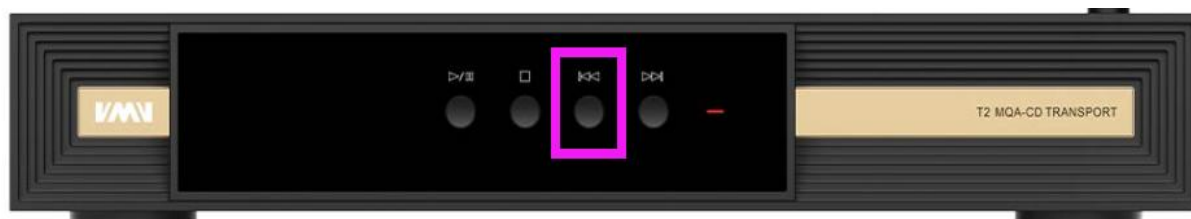

4) **Connect** with the APP

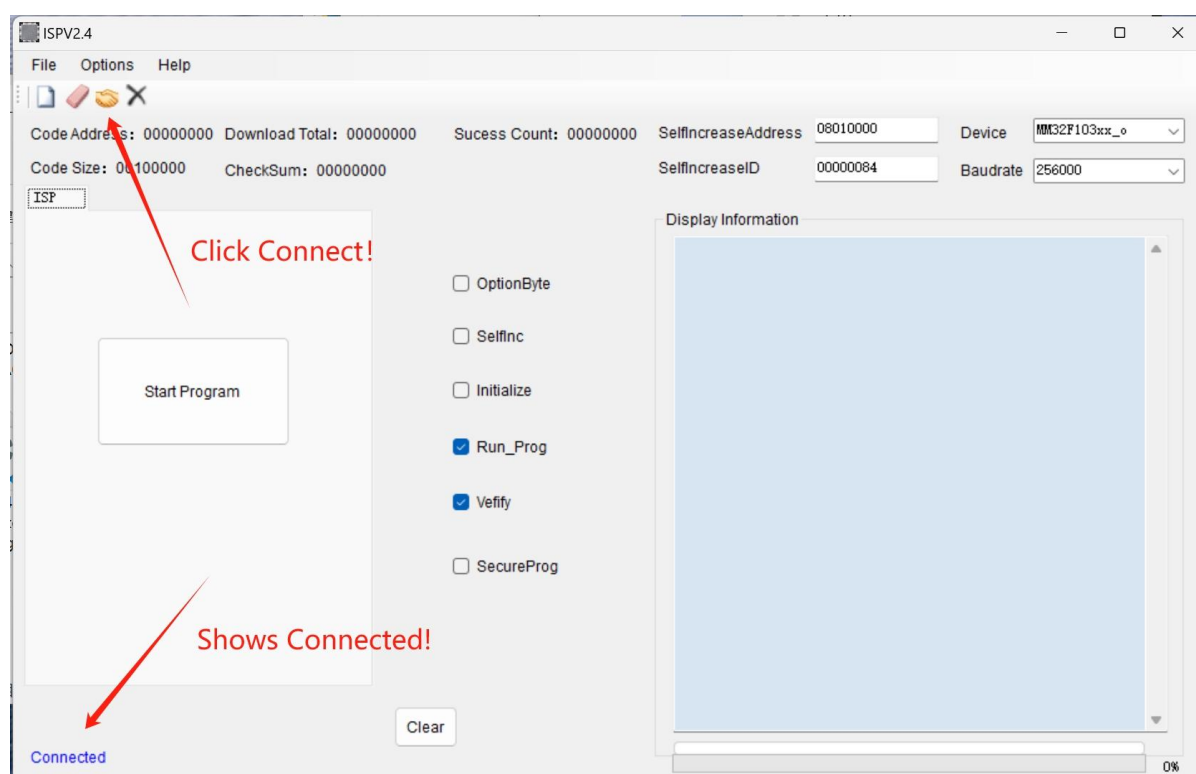

5) Click “**Start Program**” then wait for 100% .

